

Battery Operated Window Candle—VT-R1506 Series


(For Indoor Use Only)

INSTRUCTIONS:

1. Remove candlestick from the decorative base.
2. Un-screw the bottom cap of the candlestick by turning counterclockwise.
3. Insert two AA alkaline batteries (+) positive contact first into the candlestick. Be sure that (+) and (-) terminals on each battery match the (+) and (-) contacts shown in the diagram.

CAUTION: Do not mix new and old batteries. Do not mix alkaline and standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

NOTE: Lithium, rechargeable, and heavy-duty batteries will have significantly reduced battery life compared life compared to alkaline.

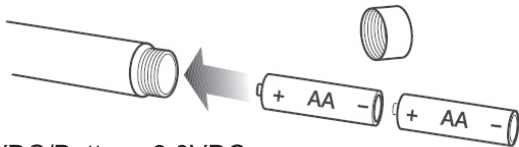

1.5VDC/Battery, 3.0VDC max

4. Screw the bottom cap back into the candlestick by turning clockwise. **NOTE:** Candle will now be on. If left on, the candle will turn off automatically after six hours and turn back on again the next day at the same time. The timer cycle will be interrupted when replacing the batteries
5. Candle can be turned off by un-screwing the bottom cap several turns, or by pressing “OFF” on remote.

REMOTE CONTROL OPERATION:


1. Remote battery included. Remove tab before use. For battery replacement use CR2025 battery. Default settings are 6 hour ON/18 hour OFF with steady light mode.
2. Point remote towards candlestick.

Auto Timer: Select desired timer setting 4, 6, 8, 12 ON and balance of 24 hours off. Repeats daily. **NOTE:** *Unscrewing the cap on the candlestick will reset candlestick to default settings.*

Mode: Select flicker or no flicker.

ON/OFF: Pressing the “ON” and “OFF” buttons will require resetting the timer.

NOTE: *Increasing length of timer will decrease battery life (Candlestick battery life is approximately 40 days of optimal brightness with 6 hour ON default timer).*

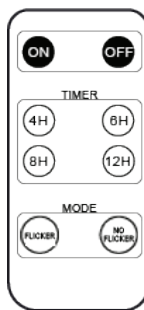

CARE:

- Remove batteries from candlestick when not in use. *Batteries left in the candle when not in use can leak and cause corrosion.*
- Lithium battery in remote may be left in remote while in storage.
- Replace batteries when the candle dims.
- Dispose of used batteries responsibly.
- Clean with a non-abrasive cleaner.
- Store in a temperature controlled environment with normal humidity.

TROUBLESHOOTING:

1. Candle Will Not Light

- Be sure to check the placement of the batteries. Please reference the battery installation portion of instructions.

2. Timer & Flicker/Steady Function Issues

- Reference remote control portion of instructions first.
- The timer may reset because the candle is moved abruptly, dropped, or tilted. If you suspect this happened please make sure the battery cap is fully tightened up. Then reset the timer and set it gently in position.

3. Light Appears Dim

- Batteries may need to be replaced. Do not mix old and new batteries. The candle will provide approx. 40 days of optimal brightness on default settings (6 hours ON/ 18 hours OFF).

Still having issues? Please reference the warranty information.

3 YEAR WARRANTY:

Our warranty covers any defect out of the box or any problems that may occur within three years of the purchase date. Warranty does not cover damages caused by improper use, storage, or handling.

We strive to make this process simple and pain-free! For the most efficient service, please email us through our website: www.612vermont.com.

If preferred, call us toll-free: 1-877-750-0971

Made in China

Rollier Hardware, Inc
DBA 612 Vermont®
600 Washington Rd
Pittsburgh, PA 15228
www.612vermont.com

WARNING! This product is not a toy and not intended for use by children. Adult use only.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
 - Even used batteries may cause severe injury or death.
 - Call a local poison control center for treatment information.
 - Battery type CR2025, 3 Volts, Lithium cell.
 - Non-rechargeable batteries are not to be recharged.
 - Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate.
-
- Ensure the batteries are installed correctly according to polarity (+ and -).
 - Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
 - Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
 - Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.